30106269GB.fm Page 1 Monday, March 30, 2009 6:09 PM

AUS (GB) WFE 1075 BD

PROGRAMME CHART

A. "Door open" indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

B. "Service" indication
C. "Water tap closed" indication
D. "Clean pump" indication

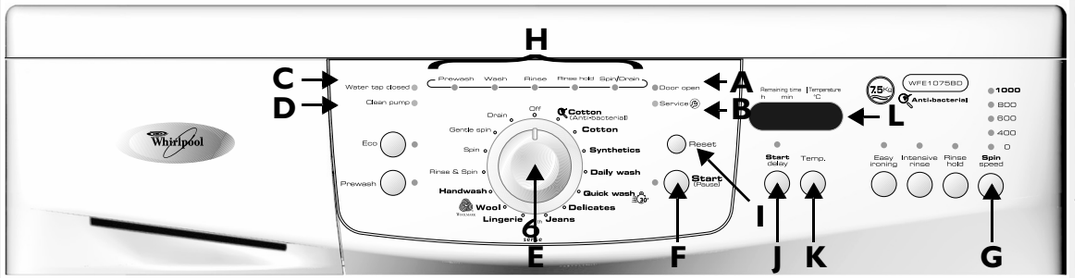

E. Programme selector
F. "Start (Pause)" button
G. "Spin speed" button
H. Programme sequence indicator
I. "Reset" button
J. "Start delay" button
K. "Temperature" button
L. Display

Programme	Tempe-rature	Care Labels	Max Load kg	Type of wash/Notes *- Respect the manufacturer's recommendations on the care label*	Detergents and additives: Pre-wash	Main wash	Softener	Special options: Eco	Pre-wash	**Start** delay	Easy ironing	Intensive rinse	Rinse hold	**Spin** speed	Max Spin Speed rpm
Cotton (Anti-bacterial)	*70 - 95 °C*	95	6.5	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. At a temperature of 80°C or more, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.	❊	Yes	❊	❊	❊	❊	❊	❊	❊	❊	1000
Cotton	*60 °C*	60	7.5												
Cotton	*20 - 40 °C*	40 30	6.5												
Synthetics	*20 - 60 °C*	60 50 40 30	3.0	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	❊	Yes	❊	❊	❊	❊	❊	❊	❊	❊	1000
Daily wash	*20 - 60 °C*	60 40 60 40	4.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	—	Yes	❊	—	—	❊	❊	❊	❊	❊	1000
Quick wash 30'	*20 - 30 °C*	30	4.0	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	—	Yes	❊	—	—	❊	—	—	❊	❊	1000
Delicates	*20 - 40 °C*	40 30	1.5	Curtains and delicate clothing, dresses skirts, shirts and blouses.	❊	Yes	❊	—	❊	❊	—	—	❊	❊	1000
Jeans	*20 - 60 °C*	60 40	7.0	Normally soiled cotton jeanswear and garments made of robust jeanslike material such as trousers and jackets.	❊	Yes	❊	❊	❊	❊	—	—	❊	❊	1000
Lingerie	*20 - 30 °C*		1.0	This cycle is particularly suitable to treat delicate lingerie (use of a laundry net strongly recommended).	—	Yes	❊	—	—	❊	—	—	❊	❊	400 [1]
Wool Woolmark	*20 - 40 °C*	Woolmark 40	1.0	Only woollens, labelled with the Woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool.	—	Yes	❊	—	—	❊	—	—	❊	❊	1000
Handwash	*20 - 40 °C*		1.0	Textiles made of silk, linen, wool and viscose marked as "handwashable".	—	Yes	❊	—	—	❊	—	—	❊	❊	400 [1]
Rinse & Spin	—	—	7.5	*Same as the last rinse and the final spin in the "Cotton" programme.*	—	—	❊	—	—	❊	—	❊	❊	❊	1000
Spin	—	—	7.5	*In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.*	—	—	—	—	—	❊	—	—	—	❊	1000
Gentle Spin	—	—	1.0	*In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.*	—	—	—	—	—	❊	—	—	—	❊	1000
Drain	—	—	—	*Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".*	—	—	—	—	—	❊	—	—	—	—	—

❊: optional / Yes : dosing required
1) For improved garment care, spin speed is restricted in this programme.

The wool and handwash cycles of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0620

Whirlpool is a registered trademark of Whirlpool USA

5019 301 06269

Black process 45.0° 150.0 LPI

30106269GB.fm Page 2 Monday, March 30, 2009 6:09 PM

PROGRAMME DATA

Programme	Temperature (°C)	Load (kg)	Approx. Programme Duration (hours : minutes)*
Cotton (Anti-bacterial) **	95	6.5	2:10
Cotton***	60	7.5	2:40
Cotton	40	6.5	2:05
Synthetics**	60	3.0	1:35
Synthetics	40	3.0	1:20
Daily wash	40	4.0	1:00
Quick wash 30'	30	4.0	0:30
Delicates	30	1.5	0:45
Jeans	40	7.0	2:20
Lingerie	30	1.0	0:40
Wool (Woolmark)	40	1.0	0:45
Handwash	40	1.0	0:40

* The time indicated on the display can deviate from the values in the table, because it takes into account the household conditions applicable at that time.
** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.
*** Reference Programme for Energy and Water labeling.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

1. Turn the **programme selector** to the desired programme. The display shows the programme duration in hours and minutes as well as the predefined temperature. The **"Start (Pause)"** button blinks.
2. The **temperature** can be altered by pressing the "Temperature" button.
3. The indication lamp of the predefined **spin speed** lights up; in case you want to set another spin speed, press the "Spin speed" button.

SELECT ANY DESIRED OPTION

Push the button of any option desired - the respective indication lights up.

When the combination of programme and additional option is not possible, the indication lights switch off automatically.

Unsuitable combinations of options are deselected automatically.

"Eco" button

- With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption is achieved.

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

"Easy ironing" button

- Reduces creasing by an increased water quantity and a very gentle spin.

"Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, for washing baby linen and for helping people with allergies.

"Rinse hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programmes "Synthetics", "Daily wash" and "Delicates".
- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- If you select "Rinse hold", do not leave the laundry to soak for too long.

  Note: The programme stops to "Rinse hold" at the time the "Rinse hold" light in the programme sequence indicator is on. The indication lamp next to the **"Start (Pause)"** button blinks.

Terminate the "Rinse hold" option:

- Press the **"Start (Pause)"** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector to the "Drain" programme and press the **"Start (Pause)"** button.

"Spin speed" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

START DELAY

The "Start delay" allows to run the machine at the consumer's convenience. Do not use liquid detergent when activating the "Start delay".

- Select programme, temperature and options.
- Press the "Start delay" button to select the delay time by 1 to 23 hours;
- Press the **"Start (Pause)"** button.
  The countdown of the delay time begins; the light of the "Start delay" button and the dot on the display will blink until the programme starts.
- The time delay indication disappears when the programme starts and it is replaced by the remaining programme time.
- Once having pressed the **"Start (Pause)"** button, the number of hours preselected can be reduced by pressing and holding the "Start delay" button. From 1 hour on, the delay time can also be reduced by minutes.

To cancel the "Start delay"

..before you press the "Start (Pause)" button:

- Turn the programme selector to another position or press the **"Reset"** button.

..after having pressed the "Start (Pause)" button:

- Press the **"Reset"** button for at least 3 seconds - the start delay time disappears from the display.

PROGRAMME START

Open the taps and press the **"Start (Pause)"** button. The indication lamp next to the **"Start (Pause)"** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

The display shows the remaining programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, **an animation appears on the display**.

"DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset) a running programme before the end".

RED INDICATIONS

"Service"

Lighting up of the "Service" indication can be caused by a fault in an electrical component. Refer to the "Troubleshooting Guide" in your Instructions for Use; if the fault persists, contact our After Sales Service.

"Water tap closed"

The appliance has no or insufficient water supply. Open the water taps; if the indication still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

"Clean pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instructions for Use ("Removing the Filter").

PROGRAMME END

- All the lights of the programme sequence indicator are off, and the "Door open" indication lights up.

1. Turn the programme selector to the "Off/O" position.
2. Close the water taps.
3. Open the door and unload the machine.
4. Leave the door ajar to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start (Pause)"** button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **"Start (Pause)"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end.

- Press the **"Reset"** button for at least 3 seconds; "rES" appears on the display. Any existing water is drained out before the door can be opened.

Whirlpool is a registered trademark of Whirlpool USA

Black process 45.0° 150.0 LPI